OWNER'S **UPM** MANUAL


FEATURES

- clock display
- dual alarm
- temperature display
- humidity display
- temperature trend indicator
- humidity trend indicator - minimum/maximum temperature alert
- minimum/maximum temperature / humidity memory
- °C or °F display
- battery type: 2 x AA

TC381 Thermo-Clock



PAGE 1

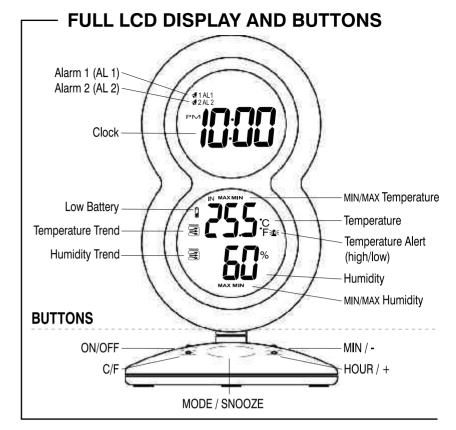

PAGE 2

TEMPERATURE DISPLAY

Min. and Max. Daily Temperature and Humidity

- Press MIN/- or HOUR/+ in clock mode, to display the minimum or maximum daily temperature and humidity. (The MIN or MAX symbol will appear.)
- Press MIN/- or HOUR/+ again to return to the normal display.

NOTE: Min/Max readings are automatically cleared daily at midnight.

Temperature trend

The trend indicator shows the trend of the temperature in the past 30 minute interval. The temperature trend is located beside the current temperature.

For example:

The following trend indicates that the temperature is rising.



Arrow Indicator		→	
Trend	Rising	Steady	Falling

TEMPERATURE ALERT



The temperature alert is a feature to be used in a room in which you need to maintain a controlled temperature. Once activated, the temperature alarm will sound if the room gets too warm or too cold.

- You can set both an upper and lower temperature alert for the local temperature.
- HIGH TEMPERATURE LIMIT: If the temperature gets too warm and reaches the high temperature limit, the alarm will sound.
- LOW TEMPERATURE LIMIT: If the temperature gets too cold and reaches the low temperature limit, the alarm will sound.

Setting the upper and lower temperature alert

- 1 Press MODE until the 1 temperature alarm symbol appears.
- 2 Press ON/OFF to select the high temperature limit.
 - The rising temperature symbol indicates the high limit mode.)
- 3 Press the (+ or -) button to set the high alarm.
- 4 Press ON/OFF again to select the low temperature.
 - (The falling temperature symbol indicates the lower limit mode.)
- **5** Press ON/OFF to select the lower temperature limit.
- 6 Press the (+ or -) button to set the low temperature. Press MODE to return to the normal display. (OR)

Press ON/OFF again to turn off the temperature alert. (The arrow will disappear to indicate the temperature alarm is de-activated)

Note: The temperature alarm sound is different to that of the alarm clock. When activated, the temperature alarm (siren) symbol will also flash.

PAGE 6 PAGE 7

GETTING STARTED

Battery Installation

Press the tab to remove the battery cover. Insert 2 AA batteries (observing correct polarity) Replace the battery cover.

12 or 24 Hour Clock

Immediately after inserting the batteries press **ON/OFF** to toggle between 12 or 24 hour display. (Note: 12 or 24 hour display, can be changed

(Note: 12 or 24 hour display, can be changed anytime by pressing the ON/OFF button during the normal clock mode.

Local (Indoor) Temperature

The local (indoor) temperature will display instantly after batteries are inserted into the receiver.

Selecting Celsius or Fahrenheit Temperature Display

Press the **C/F** button anytime to toggle between °C and °F display.

Mode button - Display Sequence

The MODE button will sequence between: Clock, Alarm 1, Alarm 2, Temperature Alarm -->

PAGE 3

HUMIDITY DISPLAY

Relative humidity is expressed as a percentage ranging from 15% to 90%. The local humidity in a room is detected by sensors inside the thermo-clock. If the humidity level falls below 15% the clock will display LO%, which means the humidity level is too low to be measured. If the humidity level goes above 90% the reading will display HI%, meaning the humidity level is too high to be measured.

Temperature and humidity trend

The trend indicator shows the humidity trend in the past half-hour interval. The humidity trend is located beside the current humidity reading.

For example:

The following trend indicates that the humidity is rising.





- LOW BATTERY INDICATION 🛭

Receiver


Replace the batteries when the Low Battery Indication ($\hat{\boldsymbol{J}}$) is displayed on the LCD screen.

NOTE: After replacing the batteries, you will need to set the clock display and wake up alarm(s) again.

CLOCK SETTING

- Press and hold MODE for 3 seconds to enter the setting mode.
 (You will hear a beep.) (The time will flash).
- 2 Press HOUR to set the hour.
- Press MINUTE to set the minute
- Press **MODE** again to return to normal clock mode.

(NOTE: Press and hold the HOUR or MINUTE button to accelerate the time setting.)

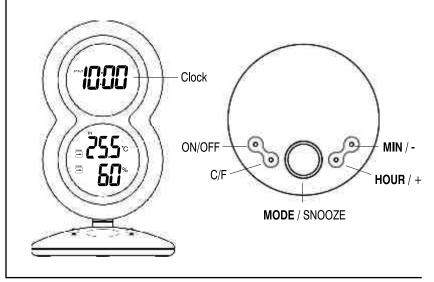

PAGE 4

TROUBLESHOOTING

PROBLEM	SOLUTION
The temperature reading on the thermo-clock does not match the actual temperature in your home.	This may occur when the unit is placed near a source of heat or a cool draft. Be sure to place the clock in a central location in your home; unaffected by direct sunlight, heat vents, fireplaces, or drafty doorways.

PAGE 8 PAGE 9

ALARM SETTING

Alarm 1 and Alarm 2 Setting:

- Scroll to Alarm using MODE. The (AL 1) ALARM 1 symbol will appear.
- 2 Press HOUR to set the hour.
- 3 Press MINUTE to set the minute.
- Press ON/OFF to turn the alarm on or off.
- The bell symbol **3** 1 AL 1 (ALARM 1) will appear and the unit will beep when the alarm in turned on. In the normal clock display, if the alarm is set ON, the **3** 1 symbol will also appear on the display.

To set Alarm 2, scroll to Alarm 2 using **MODE**. The ALARM 2 symbol (**AL 2**) will appear. Follow the same steps as above to set. In the normal clock display, if the alarm is set ON, the **3**2 symbol will also appear on the display.

When the Alarm Sounds:

- Press the SNOOZE button to delay the alarm for 5 minutes. After that the alarm will sound again.
- Press ANY other key to stop the alarm. Or without interruption, the alarm will automatically stop after one minute.

PAGE 5

SPECIFICATIONS

TC381 - THERMO-CLOCK

- Battery Type: 2 X 1.5V AA batteries - Temperature Range: -9.9°C to 55°C
- Resolution: 1°C
- Measurement Accuracy: Max. +/- 1°C within measuring range of 0°C to 40°C
- Humidity Range: 15% to 90% RH (resolution 0.5%)

LIMITED ONE-YEAR WARRANTY

This product is warranted to be free from defects in the materials or workmanship, under normal use and service, for a period of one (1) year from the date of purchase by the consumer.

If the product is defective, return it with a dated proof of purchase, to the retailer from which you purchased it.

This warranty shall not apply, if the defect, malfunction or damage occurred while the product was in the possession of the consumer, including dropping and/or abuse.

THIS WARRANTY IS THE ONLY EXPRESS WARRANTY ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE ONE YEAR DURATION OF THIS WARRANTY.

CUSTOMER SERVICE (1-888-468-6876)